



Natural Wallcovering

INSTALLATION ADDENDUM

Please be advised, this addendum pertains to the wallcoverings listed below, and is meant to assist in tandem with our full installation instructions for natural, handcrafted wallcoverings located on the reverse side or at hartmannforbes.com/installation-instructions

BAJA SERIES

WL424-03 White Sands
 WL424-06 Coral Sands
 WL424-12 Desert Sands

SEABOARD SERIES

WL414-36 Pier | shown
 WL414-03 Cape
 WL414-12 Landing

RIVERFRONT SERIES

WL415-03 Sail
 WL415-36 Mooring

BEACHFRONT SERIES

WL425-18 Bandon
 WL425-32 Seaside
 WL425-36 Newport


CHARACTERISTICS OF SPECIALTY WALLCOVERING

- These wallcoverings are handwoven and hand-finished. There will be irregularities in the weave and the finish.
- The thickness of each is inconsistent and will not line up horizontally or vertically.
- Due to the thickness of this paper, please use an appropriate wallcovering cutting blade.
- No side-match.
- Baja and Seaboard Series – Due to the unique fibers and craftsmanship of these specialty papers, be sure to remove from box at least two days prior to installation. Wallcovering should not remain in shipping box more than two weeks.



INSTALLATION INSTRUCTIONS

- Hang wallcovering as it comes off the roll — do not reverse hang (*see illustration at right*).
- Make a note on each strip to indicate the TOP. Stay consistent in aligning pieces with the TOP as the header.
- Warp filaments may need to be trimmed at top and/or bottom.
- To press down seams, use a soft bristle brush, i.e. horsehair brush. Seam roller not recommended, as it may damage wallcovering.

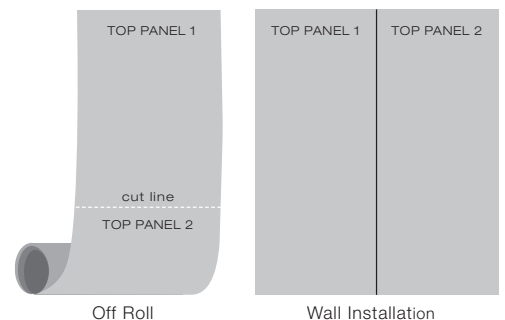

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfc@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®